

FILTER PANELS PREPARE FOR FLIGHT OPS - NODE 1

OBJECTIVE:

Remove bolts (twenty-eight) from each Filter Panel.

LOCATION:

Midbay Nadir NOD1D3-1,3

DURATION:

17 minutes

PARTS

None

MATERIALS

Tape

Ziploc Bag

TOOLS REQUIRED:

Power Driver

Kit H:

5/32" Hex Head, 1/4" Drive

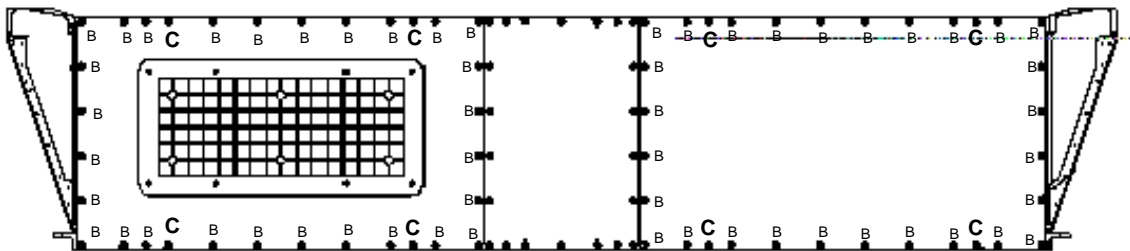


Figure 1.- Front view of Filter Panels with bolts and fasteners. The fasteners marked C are captive. The bolts marked B are non-captive.

REMOVE

NOTE

There are twenty-eight bolts and four fasteners securing each panel. The bolts are to be removed and stowed in a Ziploc Bag.

1. Remove bolts (twenty-eight) from each panel (two) and stow in Ziploc Bag, then loosen and snug fasteners on each panel (four) (Power Driver, 5/32" Hex Head).

POST MAINTENANCE

2. Stow tools, equipment.